

**Standard Operations Procedure
For
Dialogue Technology Corporation**

FlyBook A33i Notebook PC

Embedded Controller(EC) & BIOS update

Dialogue Technology Corporation

**10F, No. 196, Sec. 2, Jungshing Rd., Shindian City,
Taipei 231, Taiwan, R.O.C.**

Tel : +886 2 89115121

Fax: +886 2 89116151


Before you update the EC & BIOS program , take a copy for your important data. The system will back to original manufacturer's settings.

Plug in the DC-in adapter to the DC-in jack first , or the EC & BIOS update procedure may fail due to power break off , and FlyBook can not power on.

Check EC & BIOS version

Please check the version of your EC & BIOS are the latest , you can use the steps below :


1. Double click the [FlyBook Center] icon in the system tray. The FlyBook Control Center window appears.
2. Press "F1" key , the version data window appears

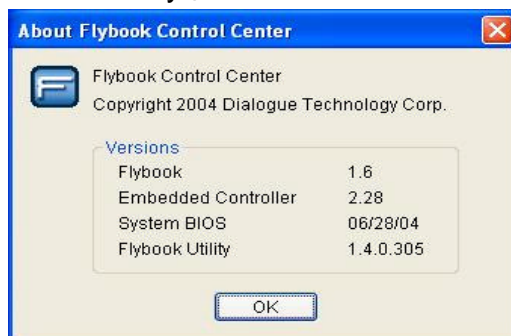

Note : The [FlyBook Control Center] window must be the highest window

1. EC update procedure


1. Please go our website (<http://www.dialogue.com.tw>) or the download area from your dealer to download EC program with the latest version
2. Unzip the EC program to a folder , then execute "GO.bat" program at the folder , the EC update procedure will run automatic

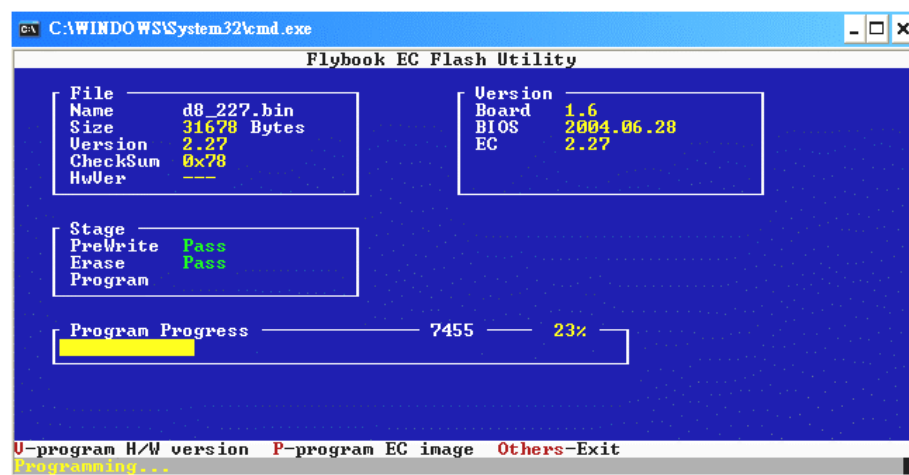


3. When update program finish , the FlyBook reboot automatic
Note : The system stop at “Windows shutting down...” , this is normal.
4. Use a pointed thing to press the “Reset” button , the system reboot automatic
5. When the system boot into windows , you can use the same steps from the “Check EC & BIOS version” headline , and make sure EC program has updated.

2. BIOS update procedure

1. Please go our website (<http://www.dialogue.com.tw>) or the download area from your dealer to download BIOS program with the latest version
2. Unzip the BIOS program to a folder , then execute “WinPhlash.exe” program at the folder , the BIOS update procedure will start into the [Dialogue BIOS flash utility] window

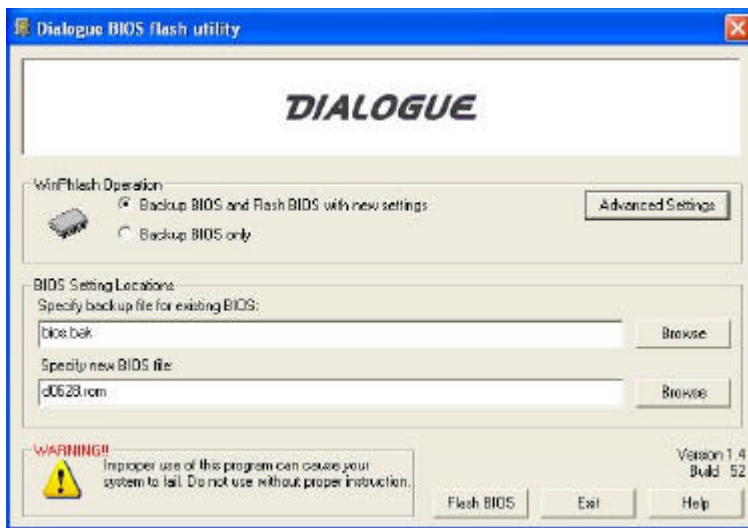

3. Press [Flash BIOS] button to confirm the update program

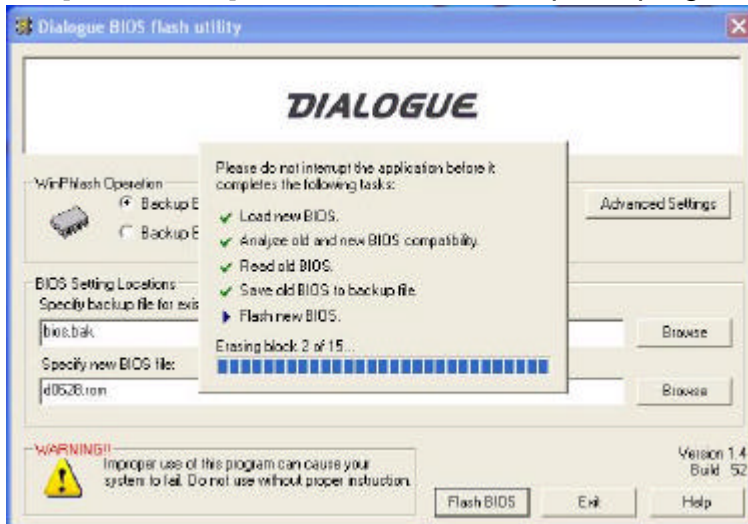

4. When update program finish the system reboot automatic , when the system boot into windows , you can use the same steps from the “Check EC & BIOS version” headline , and make sure BIOS program has updated.